



Use Ø16 mm hose + clamps

The valve or solenoid valve must be fitted on hose before water inlet

Use rotary switch connector to control the blower speeds and solenoid valve

Use a 15A fuse for 24V & 20A for 12V.

